SALE Use this function to authorize and capture transactions for settlement. The customer may offer a card for payment in one of three ways: 1) By swiping the card through the magnetic stripe reader; 2) by tapping a contactless card; or 3) by inserting a "smart card" (one with an embedded chip) into the smar card reader located at the front of the terminal or PIN pad, a technology that adds an extra layer of

MMDDYYYY HHMM Touch Sale

SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER

ENTER AMOUNT \$0.00

Key amount and press Enter

Touch Credit

TERMINAL MAY PROMPT: ENTER TIP AMOUNT OR PRESS CANCEL (X) TO PRINT A BLANK TIP LINE ON RECEIPT

Enter tip amount or press Cancel

SALE PLEASE PRESENT CARD \$0.00

Insert. Tap, Swipe, or manually key card number and press

TERMINAL MAY PROMPT SELECT CARD TYPE CREDIT DFBIT

Terminal communicates with the host for approval

TERMINAL MAY PROMPT: APPROVED: \$\$.\$\$ COLLECT \$\$.\$\$ ACCEPT PARTIAL AMOUNT

DIALING.

Press the desired option. If No is selected, transaction will be voided. Initiate a new transaction to collect full amount.

NO YES PRINT CUSTOMER RECEIPT NO

Touch desired option

APPROVED OK 000000

Touch Clear return to idle prompt

REFUND Use this function to issue a credit to the cardholder's account for goods or services. Touch Other

MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALF OTHER

Touch Refund REPRINT VOID REFUND

REFUND

Key amount and press Enter

ENTER AMOUNT \$0.00

REFUND

REFUND

APPROVED

\$0.00

PLEASE PRESENT CARD

TERMINAL MAY PROMPT: SELECT CARD TYPE

CREDIT DEBIT

PRINT CUSTOMER RECEIPT NO YES

Press Clear to return to idle prompt

Insert. Tap, Swipe, or manually key card number and press Touch Credit

Touch desired option

DEBIT SALE (with Cash Back) Use this function to authorize and capture transactions for settlement. Insert. Tap, Swipe card on terminal or pin pad HHMM MMDDYYYY Debit card can't be manually keyed SWIPE CARD, PRESS SALE OR USE PIN PAD SALF OTHER Key amount and press Enter ENTER AMOUNT \$0.00 Enter tip amount or press Cancel TERMINAL MAY PROMPT ENTER TIP AMOUNT OR PRESS CANCEL (X) TO PRINT A BLANK TIP LINE ON RECEIPT Touch Debit SELECT CARD TYPE CREDIT Key cash back amount and press Enter ENTER CASH BACK AMOUNT SALE AMOUNT: \$0.00 \$0.00 Instruct customer to enter PIN and press Enter. Do not ask WAITING FOR PIN ENTRY customer for the PIN Terminal communicates with the host for approval DIALING. Press the desired option. If No is selected, transaction will be TERMINAL MAY PROMPT: APPROVED \$\$.\$\$ voided. Initiate a new transaction to collect full amount. COLLECT \$\$.\$\$ ACCEPT PARTIAL AMOUNT YES

Touch desired option PRINT CUSTOMER RECEIPT? YFS

DEBIT SALE APPROVED 000000

Press Clear to return to idle prompt

TIP ADJUSTMENT. Use this function to add the tip amount to a transaction that is in the current batch.

Touch Other

MMDDYYYY ннмм SWIPE CARD, PRESS SALE OR USE PIN PAD OTHER SALF

ENTER REPORT CLOSE **BATCH**

Touch Enter Tips

Touch Edit Tip

ENTER TRANSACTION SEQ # FROM RECEIPT

Key seq number and press Enter

TRANS SEQ # LAST 4 #### TRANS AMT \$1.00 \$0.00 TOTAL AMT \$1.00

PREV EDIT TIP NEXT

ENTER TIP SALE AMOUNT: \$1.00 \$0.00

05062015


Press Clear to return to idle prompt

Key tip amount press Enter


TRANS SEQ # LAST 4 #### TRANS AMT \$1.00 \$0.00 TOTAL AMT \$1.00 PREV EDIT TIP NEXT

ORG-FD130-RFST


JOID Use this function to delete a transaction that is in the current batch. Touch Other MMDDYYYY HHMM SWIPE CARD, PRESS SALE OR USE PIN PAD SALE OTHER Touch Void REPRINT VOID REFUND Key seq number and press Enter ENTER TRANSACTION SEQ # FROM RECEIPT Touch OK VS SALF AMOUNT \$0.00 DATE TIME APPROVAL CODE ##### CARD# XXXXXXXXXXXXX0019 SERVER #### CANCEL ΟK PERFORMINAL CREDIT REVERSAL VOID COMPLETE MMDDYYYY SWIPE CARD, PRESS SALE OR USE PIN PAD SALE

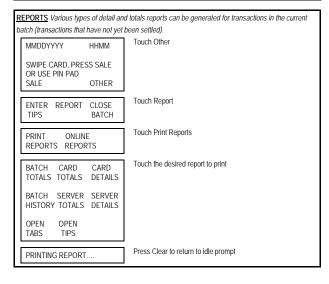

^{© 2015} First Data. All rights reserved. All trademarks and service marks referenced in this material are the property of their respective owners.

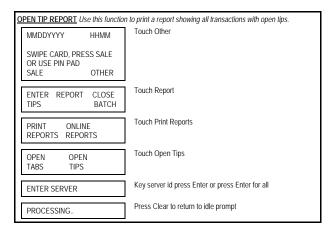

TAB PROCESSING Use this function to open, close or void tab transactions.	
MMDDYYYY HHMM	Touch Other
SWIPE CARD, PRESS SALE OR USE PIN PAD	
SALE OTHER	
GIFT HELP MORE CARD	Touch More
FORCE TABS BALANCE INQUIRY	Touch Tabs
OPEN CLOSE VOID OPEN TABS	Touch the desired option. Follow terminal prompts to complete transaction. Press Clear to return to idle prompt

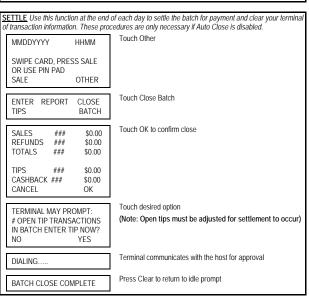

RESTAURANT

FIRST DATA FD130 QUICK REFERENCE GUIDE

{751UN130}

